

Doro 824c

User Guide

English – Version 4.3

Two documents are available to help you learn how to use your new phone:

1. The main features become very clear thanks to the audio CD that is included in the box, designed for a listening experience in actual operating condition.
2. This user guide is divided in four parts: first, a list of the 10 must-know preliminary points and 5 advanced points, then the table of contents, followed by chapters 2 to 6 explaining how to use the interface and make calls, and finally chapters 7 to 16 describing how to use the different applications.

Despite this phone being relatively simple to use, we strongly advise you to carefully read this guide to master all of its features (especially the 10 must-know key-points) and to go back to it whenever you have a question. Make sure to keep your cell phone, its elastomer keypad overlay and your SIM card close at hand while you go through our guide.

Phonecurious.com



1. 1- List of the 10 must-know and 5 advanced points

To make navigating through this list easier, each point starts with a hyperlink:

Here are the 10 must-know points to use your phone:

[1- Master the physical buttons](#) : “Sleep-Wake” button to switch on your phone, turn it off, reboot it, and go in and out of sleep mode, as well as the “Home” button to go out of sleep mode

To switch your phone on, press the Sleep-Wake button on the right side of your phone for a few seconds: the complete process will take around 30 seconds. If the phone is on, but the buttons aren’t working, this means that the screen has gone in sleep mode. To exit sleep mode, press the “Home” button on the lowest line of the keyboard or the “Sleep-Wake” button. When the Sleep mode is deactivated, a lock screen reads the time out loud then tells you to “slide to unlock”. To unlock the phone and access your apps, put a finger on the screen and slide it in any direction.

[2- Memorize the order of the function keys](#) on the keyboard, especially the 2 top lines which correspond to the navigation keys. From left to right, those keys are: Menu, Up Arrow, Correction key, for the first line and OK, Down Arrow, Back key for the second line. Below the horizontal separation line (in relief) you will find a classic numeric keypad on the following four lines.

[3- Get used to the elastomer keypad overlay](#). A few minutes of practice may be necessary to get a good grasp on how it works.

To press a button several consecutive times quickly, get used to taking your finger off 1 or 2 mm from the screen (approximately the height of the keypad overlay) before touching the screen again. Avoid the two extremes consisting in either keeping your finger on the screen and only releasing the pressure a little, or taking your finger too far away from the screen.

You should also learn how to change the interval after which a letter is repeated on the ABC keyboard for a smoother use. To change the repeat-delay time of the ABC keyboard, see “9- Settings” then “4- Keyboard” and “2- Repeat-delay interval”.

[4- Get used to opening the application-specific menus](#) by pressing the Menu key. For example from the contact list or the SMS and email inboxes, use this key to display the Edit, Delete... options.

[5- To pick up the phone](#), press OK. To have the phone read you the name or number of the caller while it is ringing, tap anywhere on the screen.

[6- During a call, move the phone away from your ear to use the keyboard](#) since a proximity sensor deactivates the screen. Press the OK button to activate the loudspeaker.

[7- Master the vocalisation’s different levels of enunciation](#) for characters, words, sentences, or paragraphs in the display and text input screens, using a zoom-in / zoom-out gesture or the gestures described in 4.5.

[8- Having to load your phone’s battery every night is normal](#), because the internet connection on Smartphones is very energy-consuming.

[9- Remember to check for updates on a regular basis](#) by going to “8-Updates” (Paragraph 14)

[10- Explore the settings interface](#) to personalize your phone using “9-Settings”.

And here are the 5 more advanced key-points, to help make sure you use phone's full potential.

A- With the numbers keys, navigate quickly through the menus you use most often. For example, open the contacts list by pressing 1 then 2 from the Home screen or dial a number after having pressed 1 twice.

B- Use the Home screen to its full potential with the keyboard shortcuts (by holding the keys longer) or voice shortcuts (accessed by pressing the Home key) to make calling or sending a text to your contacts easier. Get the time by pressing the * (Star) key, your notifications by pressing the # (Hash) key and your connections by pressing the Correction key. (Paragraph 5)

C- Learn how to switch between the standard Android-TalkBack interface and Voice Mode by pressing twice quickly on the Home button if you have activated this possibility in the Settings ("9-Settings", "2- Android interactions" and "1- Double click on Home").

D- Synchronize your Google account from the standard Android interface for a better experience with your contacts and Calendar. For this step sighted assistance may be required (Paragraph 13.4.).

E- To upload files like mp3, text or image files, Daisy or ePub books to your phone like you would do on a USB stick or an external drive, connect your phone to your computer.

2. 2- Your phone's keys and connections

2.1. The physical buttons of your phone: On, Off, Sleep, Go back to the Home screen

2.1.1. Position your phone and locate the Home button.

If your elastomer keypad overlay is already on the phone: the Home button will be easy to find as it is the closest to the bottom edge in the centre.

The Home button is essential as it allows you to go back to the Home screen at any moment.

Get this habit from the start: if you want to quit an application, launch a new one or if you are lost press the Home button to start back from a familiar point!

A double click on the Home button can also allow you to switch from the Android standard interface with Talk Back to the default Voice Mode interface if this option is activated (See chapter "learn how to use the standard Android environment")

To get access to the recent or running applications, press the Home button for a few seconds. These running applications can be closed to save the battery by pressing the Correction key above the Back key.

2.1.2. Use the "Sleep-Wake" button to turn your phone on and off, and go in and out of Sleep mode

The Sleep-Wake button is located on one side of your phone. It switches the phone on and off and in and out of sleep mode.

Press the Sleep-Wake button for a few seconds to switch on your phone. The phone will take approximately 30 seconds to switch on completely.

To completely switch off your phone, press the Sleep-Wake button for approximately 1 second and choose from the General options menu between the lines "1- Power off" or "4- Restart".

Note that from this General Options menu you can also:

- Activate or deactivate airplane mode (which cuts all the phone's connections)
- Activate or deactivate vibration mode (to mute or turn back on your phone's ringtone)
- Leave the default Voice Mode interface to the Google Android Standard interface for the most experienced users (to go back to Voice Mode, double-click quickly on the Home button).
- Activate or deactivate WiFi
- Activate or deactivate GPS
- Activate or deactivate Bluetooth

To go in or out of Sleep mode, press the Sleep-Wake button. If you are getting out of sleep mode, the phone will read the first line of the screen and if you are activating it, the phone will make a sound. You can also get out of Sleep mode by pressing the Home button.

2.1.3. Change the volume with the volume button

Press the top of this button for the volume to go up and press the bottom to make it go down.

2.2. The keypad and its elastomer overlay: 6 navigation keys and 12 numbers keys

2.2.1. The 6 navigation keys are on the 2 first lines at the top of the keyboard.

The 6 navigation keys of the 2 top lines of the keyboard are enough to navigate throughout the interface menus. They are separated from the other keys by a thin horizontal line that you can feel by running your fingers from the bottom to the top of the keypad overlay.

The 2 central column keys are the **Previous** and **Next** keys or **Up** and **Down arrows**. Through those keys you can navigate through the interface menus. In the menu pressing the Up key reads the previous item whereas pressing the Down key reads the next one. For an entry or text display screen, those keys allow you to select a character, word or sentence within the text.

The **OK** and **Back** keys, essential for going from one screen to the other, are respectively right and left of the Down arrow key, on the second line from the top.

The 2 remaining keys both have 2 different actions depending on the kind of screen you are on.

The **Menu** key is above the **OK** key on the left. It launches the voice recognition system from the entry screens and the Home screen. For the other screens it opens the application-specific options screens.

The **Correction** key is above the **Back** key on the right. It deletes the characters from edit text screens and gives the information on network strength, battery level, GPS, and Bluetooth from the other screens.

2.2.2. The 12 numbers keys are the 4 bottom lines of the keyboard

Under the 6 navigation keys is the standard numerical keyboard. The first row contains keys 1, 2, 3. The second row contains keys 4, 5, 6, the third row contains 7, 8, 9 and the fourth row contains star, 0 and hash. A dot can be found under the 5 key to spot it more easily.

In a text input screen, the keypad works similarly as on traditional buttons mobile phones. For example press quickly two times on 2 to type the letter b or three times to type the letter c. Note that by holding down the 2 key for a longer time, you will enter the number 2.

While on a text input screen, press the # (Hash) key (under the 9 key) to select the keypad typing mode (mixed case, lower case, numbers).

Besides, in menu screens, you can directly type the numerical position of items to launch them. For example, to open your contact list, press the Home button if you are not already on the Home screen, then press 1 and 2. Pressing 1 first opens the "Phone" menu which centralizes the calling, contacts, call history and shortcuts management functions; then, pressing 2 launches the Contact list application.

2.3. Practicing navigating through your phone is essential at this point

All the menus are displayed as vertical lists on the screen and are numbered so that you can know how many lines form the active menu. The phone reads the first line of the screen, and that is also the line that you will select if you press the OK button.

When you find yourself on a screen you are not familiar with, the best reflex to have is to push on the Down Arrow key to go down to the last item and select by pressing OK. You can then go back up to the item that is of interest to you with the Up Arrow key and select it with OK.

If you use a function on a regular basis, you should learn the numerical shortcut to be able to access it more quickly. For example to check out the Calls history, it is easier from the Home menu to press on 1 then 3 rather than to press OK to open the Phone screen, press 2 times on the Down arrow key and then OK again.

2.4. Supplied equipment and connections

2.4.1. Equipment supplied with your phone

The box you have received contains different items:

- The phone itself with its elastomer keypad overlay
- The battery.
- A mains supply adapter to charge your phone. Be careful with the micro-USB connector, it is asymmetrical to help you connect it the right way and should not be forced into place
- A micro-USB cable to connect the phone to your computer. It is also asymmetrical.
- An in-ear headphone.
- An audio CD that reads a quick start guide.

2.4.2. Connect your phone to the mains, a computer or a headset

Your phone also has a micro-USB port to charge it and to plug it to a computer and a jack connector to plug your earphones. To get the full description of these diverse locations, see the “Help” section on the website.

2.4.3. Enter the PIN number

The default settings of the PIN entry screen, show stars (*) for each number typed, to respect confidentiality. To have your phone read out loud what you entered, press the hash (#) key, under the 9. Press OK to confirm.

3. 3- Entering text : using the keyboard or the voice recognition :

3.1. Keyboard entries similar to the one on phones with physical keyboards

The keypad is very similar to the keypad of a traditional mobile phone with buttons. Note that it uses an ABC keyboard and not “T9” predictive text. So to write “hello” you have to press 4 quickly twice for H, 3 twice for E, 5 three times quickly for L. Wait until you feel the vibration telling you the time interval between two letters is over then press 5 again three times quickly for L and so on...

You can change the repeat delay needed to type two letters on the same key to make it more comfortable for you. See “9-Settings” then “4- Keyboard” and “1- Repeat delay”. If you increase this Repeat delay between two letters, it will increase the time between your pressing a key to type a letter and the vibration confirming this letter, which means your phone is ready for the next letter. Reducing this delay will consequently mean accelerating your typing speed.

To erase a character, press the Correction button.

To change the typing mode (from numbers to capital letters or small letters), press the hash key, under the 9. This key enables you to switch between lower case, mixed case and numbers mode.

You should also note that:

- Except for passwords and numerical fields, the first character of the entry field or the first character after a period is a capital letter by default; the following characters are automatically typed as small letters.
- When your keyboard is in capital or small letters typing mode, you can type a number by holding down the corresponding key.

This way, most of the time, you can type your texts while staying on the small letters typing mode. Indeed, the first letter of each sentence will automatically be in upper case and you can type numbers when you need them without changing the typing mode.

3.1.1. “Special characters” distribution

The special characters’ distribution is the following:

On the “1” key: period, apostrophe, comma, question mark, exclamation mark, quotation mark.

On the “star” key: @ “at”, minus or dash, plus +, star*, forward slash/, equal sign, percent, hash, & “and”, euro, dollar, pound, yen, paragraph

On the “0” key: space, new line (when available), colon, semi-colon, underscore, open parenthesis, closed parenthesis, > symbol, < symbol, opened bracket, closed bracket, opened brace, closed brace, tilde (~), vertical bar (|).

3.2. Voice recognition entry: best practices for best results

If you have a 3G/4 G or Wi-Fi internet connection, launch the voice recognition from any text input field by pressing the Menu key (above OK).

Important: when you use the voice recognition, you must be particularly careful:

- Not to start talking before the beep noise and vibration
- To place the microphone near your mouth (a few inches away), as if you were calling someone for example
- To remain completely silent before you start talking and enunciate the words very clearly from the beginning: for example you must avoid starting your sentence with “Um”.
- To dictate in one go without pausing for too long as the voice recognition will stop as soon as there is a blank.
- When you have finished dictating, stay quiet for a moment until your phone vibrates to let you know your text has been taken into account.

The phone doesn’t insert the voice recognition results immediately but redirects you to a validation screen (or cancellation) for the text you entered, allowing you to choose between several potential propositions.

Press the Back key to return to the text input field without inserting the vocal recognition results, or press “OK” to insert the chosen proposition in your text. The text will then be inserted at the cursor’s current emplacement and the enunciation level will be on “word”. You can then easily re-read the inserted text word by word using the arrow keys.

Note that this way you can dictate a text in several takes by repeating the voice recognition several times in a row.

3.3. Change the enunciation level to read a text while writing

In the next chapter the paragraph “change the enunciation level” in the chapter “Control the voice synthesis” explains how to reread the text you entered by character, by word or by sentence. Whatever your enunciation level is, you can use the “Down” and “Up” arrows to move forwards and backwards in your text.

4. 4- Control the voice synthesis

4.1. Where to perform the voice synthesis control shortcut gestures

The phone offers immediate access to some of the voice synthesis advanced functionalities, through a few simple gestures on the screen. Those actions have to be performed on the display part of the screen above the navigation keys.

Note that the upper part of the screen (immediately next to the top part of the elastomer keypad overlay) is not tactile. Make sure to perform your actions close to the first line of the elastomer keypad overlay rather than at the top of your screen.

4.2. Stop or resume vocalisation

If your screen is active, just tap with your finger anywhere on the screen to stop the ongoing vocalisation at any moment (or similarly, to resume it or repeat the last item read).

The tap gesture consists in pressing the screen and quickly moving your finger(s) away, without sliding it on the screen when you touch it. To give you an idea of the speed you should target, you should be as quick as when using a physical keyboard: the time between you touching the screen with your finger and removing it should be approximately one third of a second.

4.3. Accelerate or slow down the reading speed of menus or texts

To change the reading speed of a screen, you have several options. You can:

- 1) Either go to “9- Settings”, then “3- Languages and Vocalisation” and “5- Speech Rate”. With Up and Down arrows, you can then control the reading speed to a faster or slower level.
- 2) Or press one finger on the screen and simultaneously press once or several times on key number 5 to slow reading speed down, or key number 6 to make it faster. This option is available from any screen.
- 3) Or press 3 fingers (usually forefinger, middle finger, ring finger) on the display area of the screen and slide them up to make it faster or down to slow it down. Repeat this action several times to change the speed by several levels. The best way to put your fingers is to align them horizontally and slightly apart, 1 or 2 centimetres above the first keyboard line.

The interface has 2 reading speeds that you can control independently: one for the menus and another one for the text display screens.

4.4. Change the reading language of a text (text message, email, etc.)

If you receive an SMS, an email or read a book in a foreign language, you can directly change the language of the voice synthesis within a user-defined set of three reading languages. You can scroll between default languages – the set of languages can be changed in Settings.

To do so, press a finger on the screen and simultaneously press key 7 for voice 1, key 8 for voice 2, or key 9 for voice 3.

You can perform the same action by pressing three fingers on the screen. Just tap 3 fingers (usually forefinger, middle finger, ring finger) on the display area of the screen and move them away quite quickly to change reading language.

In settings, you can set up up to three reading languages. To do so, go from the Home screen to “9-Settings”, “3-Languages and vocalisation” and “2- Reading voices”. Please note that voice 1 is the default reading voice.

4.5. Change the enunciation level for texts or text input screen between letter, word, sentence and paragraph

You can change the enunciation level in the text display screen such as the text messages, emails, and newspapers articles or edit text screens. Please note that this function is not available for other screens such as the text messages list or email inbox.

To change the enunciation level, press one finger on the screen and simultaneously press key number 1 to read character by character, key number 2 for word by word, key number 3 for sentence by sentence and key number 4 for paragraph by paragraph.

To do the same thing, you can also do a zoom-in zoom-out gesture. To do so, place two fingers close enough on the screen (for example the thumb and forefinger or forefinger and middle finger) and move them apart while keeping the pressure on the screen. To zoom in do the exact opposite: put two fingertips on the screen a few centimetres apart (around three centimetres) and bring them together quickly, still touching the screen.

5. 5- Discover the Home screen

Explore the Home Screen and the main menus by using the Up and Down arrows as well as the OK and Back keys.

5.1. Read the information regarding network, battery, time and date, and notifications

To read the information regarding the network and battery, press the Correction key in the top right corner.

It reads the network information first: Wi-Fi and Wi-Fi signal strength if the Wi-Fi is connected to a network, then the mobile network type (3G means you have access to internet) and reception strength. Then it gives you the battery charge percentage and tells you if the GPS and Bluetooth are activated. Finally, it reads the name of your mobile network.

To have the phone give you the date and to know if an alarm is on press the star (*) button below the 7. To get a recap of your notifications concerning missed calls, text messages and unread emails, press the hash (#) key, under the 9.

5.2. Use the voice recognition system to dial a number, or select a contact to call or write a text to

If you have an internet connection (either Wi-Fi or 3G) you can use the voice recognition to dial a number or select contacts from the Home screen.

For this, you will have to press the Menu key.

Get used to the same practices as those described in the paragraph “3.2 -Voice recognition entry”. In particular, you should speak distinctly after the beep and be careful not to make any sounds or noises like “Hum...”.

5.2.1. Dialling a simple phone number

To call a number, simply dictate the wanted number. For example, press the Menu key and say “0 207 112 12 12” then press OK to confirm the call. To send a text message, press the Menu key and say “text 0 207 112 12 12” then press OK to confirm and open the text input screen. You can then use the voice recognition to enter your text message.

5.2.2. Advanced functionalities: voice shortcuts for selecting a contact

To use voice shortcuts efficiently, you may need to “train” your phone to associate intuitive vocal instructions to the correct contact in your contacts list. In some cases, using the first name of the person you would like to call will be sufficient for the app to find the corresponding contact. You may sometimes need to teach the app to recognise the name or your contact by following the steps described below.

Let’s say for example you want to call a contact named Steve Jordan (as written in your contact list) who happens to be your father:

- If there is only one Steve in your contact list, the easiest way to call him is to launch the voice recognition system and say “Steve” or “call Steve”
- If you have two or more contacts named Steve, it will ask you to choose between the different matching entries.
- If the app doesn’t make the right match, you can teach it to be more precise. For example, start a new voice recognition this time saying “call Steve Jordan”. It will then ask you if you wish to create a new voice shortcut. Press OK then select the number you want among your contacts by using the Up and Down arrow keys.

Note that nothing keeps you from associating words independently from your contacts’ First and Last names. For example you can say “call dad”, then associate this sentence with your father’s number. If your

father has a home number and a cell phone number, you can associate the words “call dad at home” to his home number, and “call dad cell phone” to his cell phone.

To get the best results, you might have to record 2 or 3 voice shortcuts for some of your contacts, to cover the involuntary variations of your pronunciation.

6. 6- Make phone calls

6.1. Make a phone call: Dial a number, answer, hang up, use the speaker

6.1.1. Dial a number

To dial a number, from the Home screen press 1 twice. It will open the “1- Phone” menu then select the first line “1-Dial a number”

You can then dial a number using the numerical keyboard. Press OK to start the call.

You can also dictate the number you wish to call with the voice recognition by pressing the Menu key.

6.1.2. Take the phone away from your ear during a call to use the keyboard

During a call, take the phone away from your ear to use the keyboard as a proximity sensor deactivates the screen during calls.

6.1.3. Hanging up

To hang up, you just have to press the Back key during a call. You can also decide to use the Home button to hang up in Android accessibility settings.

6.1.4. Answer the phone and have the caller’s name read out loud.

To answer a phone call, simply press OK. To reject a call, just press the Back key. To have the caller’s name read during the ringtone, tap anywhere on the display area with one finger. The ringtone is then muted and the caller’s name is read by the voice synthesis system.

If you left the call screen during your conversation, press the Home button then the 1 button twice to go back to the current call screen.

6.1.5. Use the speaker

When you are calling someone, if you want to turn the speaker on or off, just press OK.

6.1.6. Use the Call Waiting function

When you receive another call while on the phone, you can hear two consecutive beeps. To know who is calling you, just move the phone away from your ear and press the touchscreen for the name or number of the caller to be vocalized.

To accept this call, you need to press the OK key. To turn it down, just press the Back key. To switch from one call to the other, you can press the Up arrow and Down arrow keys.

6.2. Browse the call log, missed calls and delete a call

The call log keeps track of the last calls you received, made or missed. To browse this history, from the Home screen press 1 then 3. This will first open the “1-Phone” menu then the item “3-Call log”.

Note that this will reset the missed calls count at zero, in the first item “1-Phone” of the Home screen. The number of missed calls is indeed displayed when selecting the first line of the Home screen, “1-Phone” (e.g. “1-Phone (3)” when you have three missed calls).

Often, the fastest way to call someone you’ve already called recently is to open the call log, select the past call to this person then press OK to call this person again.

Note that while on the call log screen you can filter the missed calls by pressing 1, the incoming calls by pressing 2, or the outgoing calls by pressing 3.

To delete a call from the log, press the Correction key.

6.3. Call using the shortcuts with a long hold on a numerical key of the Home screen

To make calls even faster to up to 10 favourite contacts, you can assign their phone number to a numerical key of the Home screen and start a call by holding the assigned key for a long time (more than one second).

The default settings assign the 1 key to voicemail. If your voicemail number isn’t immediately recognised by your phone, fill it in by going from the Home screen to “1-Phone” then “4-Shortcuts” and “3-Voicemail”

To change the settings for the other keys: let’s take the example of the 2 key. Hold down the key for a few seconds on the Home screen. If no contact is assigned to the key, the app will ask you if you wish to assign a contact to the “2” key shortcut. Press OK then select the contact and the phone number you wish to assign to the key using the filtered list. From now on when you will press 2 for a few seconds on the Home screen, you will directly call this person.

If you want to change a shortcut already assigned to a contact go to “1-Phone”, “4-Shortcuts” and select “1-Numeric shortcuts”.

6.4. Call your Voicemail

To call your voicemail, hold 1 for a few seconds from the Home screen as we described above. If you have decided to assign another number than your voicemail on the 1 key, you can call your voicemail by selecting “1-Phone” then “5-Voicemail”.

7. 7- Manage your contact list

7.1. Create or edit a contact entry

To create or edit a contact entry, go to “1-Phone” then “2-Contacts” from the Home screen to get to your contact list. Press the Menu key to display the contact list application-specific menu.

Select “1-Create” to create a new contact entry or “2-Edit” to edit the entry you are on. The contact entry form will then open.

The available fields for a contact entry are the following: First Name, Last Name and Phone number. They appear as a form with a vertical list of items you can fill in. In the application-specific menu (opened by pressing the Menu key on the top left corner of the keypad), you can add the following optional fields: Email, Address, Birthday, Notes, and Ringtone.

Press OK to open the field you wish to edit, type in what you want and press OK again to confirm. For example if you want to enter “Steve” as a contact’s first name, go to the First Name field, press OK and type the name Steve with the ABC keyboard and confirm with OK.

Once all the fields you wanted to create or edit have been edited and confirmed, go to the “Submit” button, at the bottom on the last line of the contact form and press OK to save the new contact or the changes you made to an existing one.

7.2. Select a contact to call or to send a text message/email to

Start the Contacts application from the Home screen by pressing 1 then 2. Select the contact you want to send a message to by browsing through the list or use the contact filter by typing the first letter of their first or last name.

Note that the filtered list gives you all the contacts whose first or last names start by the typed letters. If you type the letters S, T and E for example you will get all you contacts named STEVE but also your contacts with a last name starting by S,T and E.

Press OK to go to the contact card you selected. Select the phone number then “1-Call” or “2-Text message” or select an email address to send an email.

7.3. Delete a contact entry

To delete a contact entry from the contact list, press the Menu key then select the third line “3-Delete” and confirm with OK.

7.4. Import contacts from your SIM card

If you are using a Gmail account, to save your contacts, synchronize them on your phone as explained in chapter 14 and you will get all your contacts automatically on your phone!

If not, you can still import all the contacts you have on your SIM card. To do so, after inserting your SIM card, open your Contacts list and press the Menu key to display the contact list application-specific menu. Select “Import from SIM card” then confirm to import all the contacts from your SIM card to your contact list. This may take thirty seconds.

7.5. Import contacts from a Nokia file (.NBU)

If your contacts aren’t on your SIM card but directly on your phone, there are two ways to copy them on your phone:

- If you don't have many contacts, copy them from the internal memory of your previous phone to your SIM card then insert your SIM card in your phone and use the import function described above. To copy the contacts of your old phone to the SIM card, go to the contact list, press the Options key and look for an item named "save all contacts" or "check all contacts" then "copy".
- If you have too many contacts for them to all fit on your SIM card and if your previous phone was a Nokia, install the Nokia PC Suite on your computer (<http://www.nokia.com/gb-en/support/product/nokia-suite/>) start this software, connect your phone to your computer and press OK to put your phone in "PC Suite" mode. Go back to the software and select your contacts. Choose where you want to save the .NBU extension file. Then you just have to copy this .NBU file on the root directory of your phone and launch the Contacts application, press the Menu key and select "Import contacts from a NBU file".

8. 8- Check and send your text messages

On the Home screen select "2- Text messages" then press OK. The screen that will appear is your text messages main box displayed as a list. The first line offers the possibility to directly write a new message. On the following lines you will find the list of all the text messages you received by chronological order (most recent on top). The main box contains the received messages, the drafts and the unsent messages.

8.1. Send a text message

To start writing a new text message, select the first line of your text messages inbox and press OK.

You can choose the text message recipient three different ways:

- Manually by selecting "1- Dial a number"
- From your contact list by selecting "2- Select contact". You will be redirected to your contact list.
- Through voice recognition by selecting "3- Vocal input"

Once the recipient's number entered, you have two ways to enter your text message, as explained in chapter "3. Entering text: with the keyboard or by voice recognition".

Once you are done editing your text message press OK then confirm the content of your message, and send it by pressing OK once more.

You can also add a picture or a contact file to your SMS. After confirming the text you typed, you will select 5 – Attach a document and will be able then to choose between 1-Picture and 2-Contact. If you select 1-Picture, you will then get access to the DCIM file, where you will be able to pick up the picture you want to send between the ones you saved in the folder. If you select 2-Contact, you will then get access to your phonebook, where you will have to select the contact you wish to send.

If you are not sure about the attached document you selected, you can still look up into it by pressing 4- Information Attached Document before sending. If it was not the document you wished to send, you can press 6- Delete Attached Document.

If you wish to save your message as a draft, press the Home button or press the Back key then press OK. You can find the drafts you saved in the Main box or by pressing the Menu key then 5- Drafts.

If you wish to send one message to several recipients simultaneously, select the option “4- Multi-recipient” from the Choose recipient menu. You can then choose successively the recipients of your message. Once those are selected, choose option “4- Write message” to edit your text message, then press OK. On that last screen, you can choose to send the message, check the recipients list or add a new recipient.

If you wish to confirm that your text message has been sent, activate the Delivery report by pressing the Menu key and opening “7- Parameters”. You can then check your sent messages by pressing the Menu key from the Text Messages application and selecting “4- Sent messages”. Select the message that you wish to check the delivery of; you will hear “Message delivered” followed by the name of the recipient.

If the message has not been sent, a sound will notify you.

8.2. Check your text messages

To browse your text messages use the Up and Down arrow keys. When in the text messages inbox, you get an overview of your text messages but the different enunciation levels aren’t available for a more precise consultation. To read the full content one of your text messages, press OK when you get to the wanted message in your inbox. You then really open the text message.

To check the text messages you sent, press the Menu key and select “4-Sent messages” from your inbox.

8.3. Check your MMS

To browse your MMS when opening the SMS application, use the Down arrow key to scroll down on the second line and OK on “Go to MMS”. Your MMS will then appear in a chronological order.

If you are not used to receive or send MMS, you can deactivate the simplified access to the MMS option by pressing the M key, scrolling down to 7-Parameters and disable 5-Simplified access to MMS.

8.4. Reply to a text message

To reply to a text message, go to the message you want to answer to using OK from your inbox and press OK once more from the message display screen. You will then open a text input screen from which you can type your message either with the keyboard or the voice recognition.

To transfer a text message select “3-Forward” from the options menu, then choose the recipient and enter your message.

8.5. Delete a text message

To delete a text message, from your inbox just press the “Correction” key twice: this will first open a confirmation screen then confirm deleting the text message. You can also confirm the suppression of your text message by pressing OK.

To delete a text message from the message reading screen, go to the message you want to delete and press Menu, select “2-Delete”, then just confirm you want to delete the message by pressing OK.

9. 9- Check and send emails

On the Home screen select “3-Emails” then press OK. The screen that will appear is your email inbox displayed as a list. On the first line the possibility you can choose to write a new message, and on the following lines you will find the list of all the emails you received by chronological order (most recent on top).

9.1. Send an email

To start writing a new email, go to the first line of your mail inbox and press OK.

You will then be directed to the email creation form with 6 lines.

On the first line you can choose the main recipient(s) of your email using the ABC keyboard (the “@” key being the first character of the star (*) key under the 7, and the period the first character of the “1” key):

- Once you enter the first letters of an email, the app provides you with a list of corresponding emails from your contact list. You can explore them with the down arrow key.
- You can also directly type the first letters of a contact.

On the second line, you can choose the recipients you wish to copy (cc).

On the third line, you can type the subject of your email (either using the keyboard or voice recognition)

The fourth line is the body of your email (here again you can choose between using the keyboard or the voice recognition system).

On the fifth line, you can add an attachment to your email. When you press OK you will be sent in the file manager where you can navigate the folders on the internal memory with the up and down arrow keys. Press OK to select the file you want to attach.

When you are done editing your message, go to the sixth line and press OK, then check the content of your email and confirm sending it by pressing OK once more.

If you decide to quit an email while editing it, it will automatically be saved in the Draft folder of the Email application.

9.2. Check and manage your emails

To navigate within your emails list, just use Up and Down arrow keys from the Mail Inbox screen. Open an email by pressing OK, and come back to the list by pressing the Back key.

To browse the recipients list for an email you are reading press the Menu key and select “1- Recipients”. You can add an email address to a contact card by pressing OK or Menu when on the email address. You can then choose to add it to one of your existing contact or create a new contact.

The other options are to answer, forward, delete, move a message etc.

To get the list of the web links inserted in an email in order to view them in the web browser, press the Menu key and then “8- Display links”. You can then press the OK key to open the chosen link.

To get the list of the attachments contained in an email, press the Menu key then “9-Attachments”. The number of attachments is read along with the menu title. You can then press OK to display the selected attachment. The formats handled by the mail application are: PDF, RTF, TXT, DOC, DOCX.

For the files formats that are not yet supported (as per PPTX and XLSX for now), you can still download them in the Download folder of your phone to access them through the File manager application in the Utilities section or access them through a computer or another android app.

To browse the different folders in your mailbox, press the Menu key and select “8- Folder list”.

You can also mark an email as unread by pressing the Menu key from your inbox and selecting “7- Mark as unread”.

9.3. Reply to an email

To reply to an email, go to the email you want to answer from your inbox and directly press OK or press the Menu key and select “2- Reply”. You will then be directed to a screen on which you can type your message.

If in the options menu, select “3- Reply all” or “4- Forward”, the email creation form will open with all the information filled in, except for the recipients and you will be able to modify the email as you see fit.

9.4. Delete an email

To delete an email, from your email inbox list just press the Correction key twice: this will first open a confirmation screen then confirm deleting the email. You can also confirm deleting your email by pressing OK.

To delete an email from the email reading screen, go to the email you want to delete and press Menu then “5-Delete” and confirm.

To empty the Trash folder of your mailbox, press the Menu key from the Inbox screen and select “0- Empty trash”.

9.5. Add an email account

The first time you will open the email application, you will be asked to set the parameters of your email account.

To add another email account afterwards, you can access the accounts list from your Inbox by selecting “9- Settings and accounts” then open a new account form by pressing the Menu key then “1-Add account”. Please note that you can only add an existing email account (and not create a new email address).

On this configuration screen you are asked on the first line to fill in your email address (for example: steve.jordan@gmail.com) and on the second line your password. Be careful where you are when doing this: your password will be read clearly out loud to avoid any mistakes. If you don't want your password to be overheard we would advise you to temporarily lower the volume of the voice synthesis. The third line is the confirmation of your information.

Most of the email extensions are recognised and can be configured automatically. In this case you will be asked on a pop up screen to choose between automatic and manual configuration. We would advise you to choose the automatic configuration. If the automatic configuration isn't available a second form will appear

and you will have to enter the email server parameters. You can check that information on the internet and find your account parameters. An example of such a configuration is available on the audio user guide.

Once that information is filled in, you can choose the name you want for your account and add a description.

10. 10- Use the vision aids applications

10.1. Camera Application

10.1.1. Torch, photo and video, gallery

The Photo function enables to take pictures by pressing the OK button or just by tapping the screen. On the Home screen select “4- Vision aids” then “4- Camera”. Then, select “1- Take photo” to access it. After taking a picture, you can choose whether to directly come back to the picture taking screen or to add a description to the picture you just took. To activate or deactivate the flashlight, press 1. To zoom in, press the Up arrow and to zoom out, press the Down arrow. By pressing the Menu key, you can choose the definition of the picture, the activation or deactivation of face recognition and the default flash mode. The face recognition feature will enunciate the number of faces that the camera recognises in the picture you are taking.

The video function (“2- Take Video”) enables to take videos by pressing OK. You will need to press OK again in order to stop the recording. Flashlight and zoom are managed as for the pictures function. To zoom in, press the Up arrow and to zoom out, press the Down arrow. By pressing the Menu key, you will be able to choose the definition of the video and the default flashlight mode.

The Gallery enables to view the photos and videos stored on the memory of your phone. The Gallery function first lists the folders containing pictures and videos. After selecting a folder, the list of pictures and videos is displayed. Browse through the elements with the Up and Down arrows and press OK to view the selected picture or video. Use the Menu key to edit the description of a picture, delete or get details of an element.

On the same Menu screen, you can also decide to:

- Launch the OCR (character recognition) on the photo selected,
- Send it by email,
- Send it by MMS.

To download the pictures and videos onto your computer, plug your phone to a computer; open the DCIM folder, and then the Camera subfolder.

The “Activate Torch” function, on the fifth row of the main menu of the Camera application, enables to use the flashlight of the phone as a torch. It has no impact on the activation of the flashlight while taking a picture or a video.

10.1.2. Barcode scanner

Please bear in mind that this function cannot give perfect results and might be challenging to use. We offer this function as it can be useful and convenient, but getting an accurate result might take time and you will probably need several takes. Indeed, the only way to get good results is to correctly align the phone to take a well-calibrated picture of the barcode, which can be challenging with no or low vision, for instance if the barcode is difficult to find. Sighted assistance might be useful to get more comfortable this application.

Please note that we are using the same technologies as the other barcodes readers available on smartphones. Our tests suggest that our application is as efficient as the best ones we tested.

To launch the Barcode Scanner, open “4- Codes Scanner” from the main screen of the Camera application. The scanner is immediately running. You can press 1 to activate or deactivate the flashlight in continuous mode, which might improve the results depending on the object and the light conditions. By pressing the Menu key, the Focus mode can be changed: continuous (the scanner adapts the focus to the object), Macro (the focus is fixed to around 5 to 10 centimetres of the object), or automatic.

Once the Codes Scanner is launched, you should aim to place the object on which you wish to scan a code 10 to 15 centimetres away from the phone, and very slowly move the object in front of the camera lens to try and find the barcode.

Once the barcode has been recognised, the app offers to launch a barcode search on the internet, which in most cases enables to identify the object in the first results of the web search. To access the result faster, you can press key number 3 in order to navigate by heading through the search results.

By pressing the Menu key from the screen displaying the recognised code, you can save a voice memo or a text note linked to this barcode. The voice memo will automatically be read the next time you scan that code, and the note can be retrieved by pressing the Menu key.

It might take some time to get a satisfying result as the only way to take a proper picture of a Barcode is to aim at it perfectly. Help from a sighted person for your first try can be required.

10.2. Read a document using the Optical Character Recognition (OCR) application

With the Optical Character Recognition (OCR) app, you can scan and read simple documents (mail, restaurant menus...) very easily. This application can be particularly useful when traveling or for day-to-day use. Its results are some of the best among the existing mobile OCR applications, with one of the shortest processing time (less than 5 seconds).

To get the best results, sighted assistance may be useful on the first few instances in order to help you take the best position.

To launch the Optical Character Recognition from the Home screen, go to “4- Vision aids” then “1-OCR”.

The method described below consists in scanning an A4 piece of paper in two takes: first the top part, then the bottom part of the page. You can also try to scan the A4 page in one take if the printing is not too small.

1- Place the document in vertical position in front of you (it doesn't matter if the page is upside down) on a flat surface (preferably with a plain and light background).

2- Place your phone on the document at a right angle with it, the tactile screen facing up (if the document is in portrait position, then place your phone in landscape).

3- Line up the bottom of your phone on the right side of the document, so that your phone's camera points at the centre of the A4 page and leave a space of about 3 fingers wide between the phone and the top of the document for a good positioning.

4- Take your phone with both hands holding it by the corners with your thumb and your middle finger and lift it up vertically so you can put your elbows on the table and be stable while keeping a good focus on the top of the page.

5- Tap anywhere on the screen with your forefinger, or press OK or press the volume button to take the picture while staying as stable as you can until you heard the sound confirming the photo has been taken. Note that in some cases it can be useful to activate the flash by pressing key 1.

6- The Optical Character Recognition will then read out loud your document, turning it around by itself if it is upside down. The processing usually lasts less than 5 seconds. If nothing happens after 10 seconds, go back to the previous screen by pressing the Back key and take another picture.

To maximize the quality of the OCR, there are three main guidelines to follow:

- The optical parts of the camera being very light sensitive, it is important to have enough light on your page and not too much shadow (flash can be used by pressing 1 to overcome this difficulty).
- For the picture to be clear, it is essential that you stay very stable while taking it.
- And last, to scan an A4 document it sometimes is easier to do the OCR in two times: first the top of the page then the bottom.

Once you have scanned a document, you have the possibility to save the recognised text, the picture corresponding to the text or both. To do so, press the Menu key from the reading screen and select the preferred option.

Please note that the recognised text will be save as a note accessible in the Note application (“5- Utilities” then “5- Note”).

The picture will be saved in the Photo Gallery and you will be able to retrieve it from the memory of your phone in folder DCIM, subfolder OCR.

You can also decide to read documents in different languages with the OCR application. To do so, just press the Menu key when OCR is ready and select the scanning language between German, French, English, Spanish, Italian or Dutch.

10.3. Identify a colour of your environment using the Colour application.

To start the Colour application from the Home screen, use “4-Vision aids” then select “2- Colour”.

To identify a colour, you just have to point the phone’s camera towards a surface about 5 to 10 cm away, and the app will tell you what colour it is. You can either wait for the application to say the colour by itself or force it by tapping anywhere on the screen with a finger.

You can activate or deactivate the flash by pressing OK if the environment isn’t bright enough.

Very dark or light colours are more difficult to identify for the Colour application for now.

10.4. Check the light intensity using the Light Sensor Application

The light sensor application makes a more or less high sound depending on the intensity of the light detected by the camera sensor. You can use this information to know whether the light is on or off in a room as well as to identify the light sources or openings (doors, windows).

It is also possible to use this application to know whether you switch on or switch off the lights when manipulating a switch. To do so, press the Menu key to stop the sound, and just before auctioning the switch press OK to record the current light intensity as a benchmark. Shortly after that, a light vibration of the phone indicates that you can activate the switch. The application will then tell you if the light was just switched on or off.



11. 11- utilities

11.1. Drag and drop files from your Computer

Some applications are made even more interesting by the possibility of transferring files from your computer to your phone and the other way around. This is possible of course for Notes and Voice memos applications, but also for the MP3 player and Book reader.

For this you have to:

- Connect your phone to your computer using the supplied USB cable.
- If necessary, your computer will install the drivers for the phone. This can take some time for the first connection. It will then appear just like a USB flash drive or an external hard drive.
- Then you can drag and drop the files you want from your computer to the file of your choice in the memory of your phone (ClariaNote for Notes, ClariaBook for the Book Reader's books, DCIM for videos or photos, Music for the music files of the MP3 player and Alarms to add an alarm ringtone).
- Unplug your phone.

11.2. Alarm application

The Alarm application available in the menu "5- Utilities" and "1- Alarm" gives you the possibility to create recurring or occasional alarms.

When your alarm rings, remember that your screen is activated. A menu screen will be displayed on which the first line is "Stop" and the second line "Snooze 10 minutes". To stop the alarm, you just have to select the first line by pressing OK but you can also press 2 to push back the alarm 10 minutes if you want to keep sleeping for a little while for instance.

Note that for the alarm to ring, the phone has to be in sleep mode, even if you have to set the airplane mode. If you switch your phone off completely it will not ring.

The first line of the main screen of the application is 1-Create alarm, then the list of already programmed alarms.

To create an alarm select "1-Create alarm". It will open the alarm creation form. You can start by entering the time of your alarm by typing 4 numbers (hour hour minute minute), or 2 numbers if it is an exact time (hour hour).

Then press OK to change the repeat parameters which enable you to set up your alarm on given days. On the repeat screen, press OK to select or unselect the days you want your alarm to ring and on the "Back" key to save your changes.

The other fields are optional. You then save your alarm by pressing OK on the sixth line of the creation form (Submit field).

To use an existing alarm, select it and press OK. A menu will ask you on the first line if you want to activate or deactivate it, on the second line if you want to edit it and on the last line if you want to delete it.

Finally, on the Home screen, press the Star (*) button under the 7 to check the number of activated alarms. This number is given after the date.

It is also possible to add new Alarm ringtones. To do so, just connect your phone to your computer (as explained in paragraph 11.1. above) and drag and drop an audio file (frequently mp3) in the Alarms folder before disconnecting your phone. The new ringtone will appear on the last row of the ringtones list upon the creation of an alarm.

11.3. The GPS Application

Your phone is provided with a pedestrian and car GPS using Google Maps data to guide you on short distance itineraries. Using your GPS requires an internet connection (Wi-Fi or 3G). A 3G connection with your telecom operator subscription is necessary for a completely mobile use.

The itineraries must be considered as guidelines only and you may have to follow a different path than the one calculated if you encounter construction work, traffic jams, difficult weather conditions, diversions or other problems. Please take this into account when preparing your travel.

To start the GPS from the Home screen, press "5- Utilities" then "2- GPS".

Important: do not forget to switch on the GPS sensor before launching the application. You can do that from the General Options menu by pressing the "Sleep-Wake" button for two seconds, or from the Home screen by going to "9- Settings", "1- Connections" and "3- GPS" ("1- WiFi").

11.3.1. Choose an itinerary and let the app guide you

There are two different ways to program an itinerary:

- By selecting "1- Destination only" in the GPS menu, you choose only your destination. The GPS takes your current position as your starting point.
- By selecting "2- Start and destination" in the GPS Menu, you can choose both your starting point and destination. This can be useful when preparing a trip or to specify your starting point if the GPS doesn't automatically detect your exact position, especially if you are inside a building.

To enter an address you can type it with the ABC keyboard, enter it vocally or select it in your favourite addresses list.

To enter a place using the voice recognition system, you have to speak very clearly and specify the city or zip code (for example: 10, Downing Street, London).

Once you have set your starting point and destination, the GPS app calculates your itinerary and presents it as a list of directions guiding you step by step to your destination. You can check if the itinerary suits you if you already know it by going through the list with the Up and Down arrow keys.

Then, it informs you automatically through your earphones or speaker of the direction you have to take while you go, until you reach the final destination.

From an itinerary screen, you can access the following options by pressing the Menu key:

- "1- Current Location"/"Where am I": to get the address the closest from your current position

- “2- Current location during navigation”: to activate the “Current location”/“Where am I” function during your journey. The app will give you the closest address to your location while you move.
- “3-Update itinerary”: to update your itinerary if you think your path changed from the initial itinerary (you will need an internet connection).
- “4-Save route”: to save your itinerary and consult it offline. Attention: while consulting your itinerary offline (without any internet connection), you will not be able to use real-time guidance.

11.3.2. Get your position

By selecting “3-Current Location”/“Where am I” in the GPS menu, it gives you the address which is the closest to your current position depending on the available GPS data, as well as orientation indications. The cardinal point indicated in this function is the one towards which the top part of your phone is pointing when held in horizontal position, parallel to the floor. To get more accurate results for this particular element, it is recommended to move your phone in a figure 8 a few times; this will help calibrate the compass. It is also possible to use an experimental function indicating on which side odd/even numbered houses are. This function needs to be activated in the Parameters menu.

11.3.3. Manage your address book

You can save your favourite addresses so you can access them more easily for your next itinerary.

To access your favourite addresses, select “4-My addresses” in the GPS menu. A list of your favourite addresses will be displayed.

To save a new address press Menu then select “1-Create an address”.

There are two different ways to enter an address:

- Through the voice recognition system. You will have to speak very clearly and specify the city or zip code (for example: 10 Downing Street, London).
- By typing it manually using the ABC keyboard.

To delete an address from your address book, go to the address you want to delete then Press Menu and select “2-Delete address”.

11.3.4. Manage your routes

You can save your most frequently used routes to avoid having to enter the settings of your journey every time you need to access it.

To retrieve your saved itineraries, select “5-My routes” from the GPS menu.

If you wish to consult an itinerary, select the chosen route and validate by pressing OK.

If you want to delete an itinerary from your favourite routes list, select that itinerary, press the application-specific menu key and validate to delete.

11.3.5. Choose your GPS settings

The GPS can be used in car mode. To change the travel mode, select “6-Settings” from the GPS Menu and validate. Then press “1-Travel Mode” and select “2-Driving”.

Other navigation options are available in the Settings menu. You can set the alert radius in “2-Alert radius” – this calibrates how long before a change of direction you wish to be informed by your GPS (e.g. 20 or 25 meters before intersections). Use the Up and Down arrows to change this parameter.

You can also change the repetition interval of the “Current Location”/“Where am I” function in “3-Current Location refresh frequency”.

Finally, it is possible to activate the numbering function in “4-Numbering”. This experimental function indicates which numbers (odd or even) are on your right side, at the end of the “Current Location” information.

11.4. Calendar/Agenda

The Calendar/Agenda application enables you to easily manage your schedule.

To open the Calendar application, select from the Home Screen “5- Utilities” then “3- Calendar”/“Agenda”. The main screen presents the list of all the events of your calendar by chronological order with the events of the day on the first line.

By pressing the Up arrow, you can scroll up to the older events and with the Down arrow, scroll down to future events. To move more rapidly in time, use keys 4 and 7 to move day by day, 5 and 8 to move week by week, and 6 and 9 to move month by month. Select the event of your choice, then press OK to read its detailed content.

To create a new event, press the Menu key from the main screen of the application and select “1- New event”. The event creation form then shows the following fields: event title, from date, from time, until date, until time. By pressing the Menu key, you can also choose to add a description, a location and a reminder.

The Reminder field enables you to setup a ringtone in order to remind you the event so that you never miss an appointment again. You can select how long before the event you would like the phone to activate the reminder.

As we will see in chapter 14, you can synchronise your Google account with your phone. If you use Google Calendar on your computer, all your events and calendars will automatically be synchronized with your phone and will appear in the Calendar application.

Please note that recurring events are not yet handled by this first version of the application (neither in read nor write mode).

11.5. Calculator

The Calculator app enables you to make simple operations very easily. You can find it in 5- utilities then 4- Calculator.

With the Star key, you can enter signs for addition, subtraction, multiplication, division.

With the Hash key, you can enter signs such as period, left and right parenthesis and percentage.

To know the result, press the OK key.

To read the operation, single tap on the screen with one finger.

11.6. W

11.7. eather Application

The interface includes a Weather Application, enabling to consult weather forecasts up to 10 days.

When opening the application, it automatically detects your current location and gives you information on your city: date, weather forecast, minimal and maximal temperature and wind speed. Using the Up and Down arrows, you can move chronologically to get forecasts for the following days (up to 10 days).

To get weather forecasts for another city, press the application-specific Menu key and select "1-Select city". Your previous searches will be available in the history, from the third line of the application-specific menu.

The default temperature unit is Celsius degrees. It is however possible to switch to Fahrenheit degrees in "7-Choose temperature unit".

This application requires an internet connection as well as the activation of the localization feature (via WiFi and mobile network). This can be done in "9-Settings", then "1-Connections", "3-GPS" and "2-Localization" via Wifi and mobile network.

11.8. Voice Memo Application

The Voice Memo application is a Dictaphone that gives you the possibility to save vocal notes and play them back later.

To launch the Voice Memo application from the Home screen, just go to "5- Utilities" and "6- Voice Memo".

The first line of the main screen of the application is "new record" and the other lines are the list of the memos you have recorded. Note that you can filter this list. You can then very easily find a memo if you have given it a specific title.

To record a new voice memo, select the new record button by pressing OK then start talking. To stop the recording press OK again or press your finger anywhere on the screen. A 2 lines menu will be displayed for you to choose a title for the memo. If you press OK the title of your memo will be the time and date of recording. If you select the second line "custom name", an edit text screen is displayed where you can enter the title you want for your memo (using the ABC keypad or voice recognition) then press OK to confirm.

To listen to a voice memo, pre-select it from the main screen and press OK.

To delete a voice memo or change its title, pre-select it from the main screen and press Menu, then choose line 1 or 2.

11.9. Note application

The Note application gives you the possibility to write and read notes written with the app or transferred from your computer.

To launch the Note application from the Home screen, go to "5- Utilities" then "7- Note".

The first line of the main screen is "create new Note", the other lines below are the list of notes you have already written.

To create a new note, select "create new Note" by pressing OK to open a new text entry field. You can type your note with the ABC keyboard or through the voice recognition.

When your note is entered, press OK to save it.

You can also prepare your notes on your computer, save them as .txt files and transfer them to the ClariaNote file on your phone (see the 15th of the key points to know how to transfer files)

To read your notes, go through them using the Up and Down arrow keys in the list, it will read them as you go. To read a note using the different enunciation levels, pre-select the note in the list and press OK to open a text display screen.

To change a note, you can preselect it from the main screen and press Menu then select edit note or go to the note by pressing OK and press OK once more inside the text display screen. To delete a note, preselect it, press "Menu" then select "1-Delete note".

11.10. File manager

This application enables to manage files within the memory of your phone. You can find it in 5- Utilities and 8- File manager

Available actions on a file or folder using the Menu key are: Copy, Paste, Delete, Cut and Rename. It is also possible to create folders.

Furthermore, this application offers the possibility to open files of various formats. Supported formats are: Text (DOC, DOCX, TXT, PDF, XLS), Image (JPEG, PNG), Audio (MP3, OGG, WAV, M4A, FLAC, AAC, 3GP), Video (MP4), Android Application (APK).

It is therefore possible to download an attachment from an email into the Download folder such as an image or an audio file and open it from the File Manager application.

For example, if you want to listen to an audio file you received by email with the MP3 player, you need to copy / paste it from the Download folder to the Music folder.

To do so, select the file to move, press the Menu key and select 1- Copy or 4- Cut. Then press the Back key to go back to the first level of folders from the internal memory then choose the "Music" folder by pressing OK. Last, press the Menu key and select 2- Paste.

12. 12- Multimedia Applications

12.1. MP3 player

12.1.1. Browse your music library

To start the MP3 player application from the Home screen select "6- Multimedia" then select the "MP3 player" line.

Once in the MP3 player menu, you have three ways to browse through your music library:

- By artist
- By album
- By tracks title.

In each of those submenus, there is a filtered list of the selected files.



You can start the song you want to listen to by placing yourself on the song in the list and pressing OK.

Supported audio files formats are: .mp3, .wav, .aac, .flac, .ogg, .mid, .3gp, .mp4, .m4a.

12.1.2. Options available while listening to music

Once you are listening to a song, you can:

- Control the volume with the Volume button on the left side of your phone
- Stop or restart the music at any moment by tapping on the screen with your finger.
- Fast forward the song 20 seconds by pressing 9 or go back 20 seconds by pressing 6.
- Go back to the beginning of the song playing by pressing the Up arrow key once.
- Go to the next song by pressing the Down arrow key once or to the previous song pressing the Up arrow key fast twice.
- Activate or deactivate the repetition of a song or all songs by pressing 1. The 3 choices form a loop when you press 1. (Tip: stop the music to hear the voice synthesis system read you the different choices better).
- Activate/Deactivate the shuffle playing mode by pressing 2. (Tip: stop the music to hear the voice synthesis system read you the different choices better).

12.1.3. Allow or block music outside the MP3 application

You can activate or block playing music outside the MP3 application (background mode). By default, this parameter is blocked and exiting the MP3 application, for example by pressing the Home button, stops the music. To change this parameter, go to the first screen of the MP3 application and on the line "4- Sound out of MP3 player" and press OK twice.

12.2. Book reader (Daisy, mp3 and txt files)

The Book Reader application gives you the possibility to read Daisy 2.02, ePub and Nimas ebooks as well as simple mp3 and .txt files. You can also control the reading speed, make bookmarks, and browse through the books.

To launch the application, go to "6- Multimedia" and then "2- Book Reader". The first screen of the Book Reader application gives you the list of the books stored in the ClariaBook folder of your phone.

12.2.1. Add and delete books from the ClariaBook folder

To add or delete EBooks, you just need to add or delete them from the root file of the ClariaBook folder on the internal phone memory. To know how to do this, see chapter "11.1 Drag and drop files from your computer".

If the ClariaBook folder doesn't exist yet, simply start the Book Reader application once, it will create it. You can also directly create the folder using the exact same name ("ClariaBook").

You can also delete a book from the reader by selecting it and then choosing "Delete".

12.2.2. Actions available in the Book Menu

When selecting a book, the book menu screen will be displayed. On this screen you can choose to start reading from your last position, go to your bookmarks, start reading from the beginning, display the chapters list if your book is a Daisy file, delete the book or control reading speed.

12.2.3. Change the reading speed of a book

To change the reading speed, use the gesture described in paragraph 4.3. Accelerate or slow down the reading speed of menus or texts: one finger + keys 5 or 6, or slide three fingers up or down on the screen.

For audio format books, a reading speed is set for each book whereas for books in text format, the reading voice is used and modified.

12.2.4. Use the Bookmarks

While you are listening to a book you can add a bookmark by pressing Menu and selecting “1-Add a Bookmark” or by pressing 1 directly while you are reading.

To access your bookmarks go to the Book menu screen and select “2-List of Bookmark” then select the bookmark from which you want to start reading.

12.2.5. Choose chapters

For Daisy or ePub files, the initial menu of each book asks you on the fourth line if you want to see the list of chapters so you can start from anywhere you want in the book.

12.2.6. Navigate in your books using the different browsing modes

Different browsing modes are available to navigate in a book depending on the kind of file you read.

When you are listening to an MP3 book you can either change the browsing mode by pressing “Menu” and selecting the mode you want or change it by pressing the numerical keys directly on the reading screen (note that the numerical keys used to control the browsing in your book are the same using the Menu key or directly typing while the book is reading. This means that you use the Menu key to have the instructions reminded to you while you are not familiar with them, and directly type the relevant numerical key once you have memorized their navigation functions. To take an example : setting navigation mode to + or – 1% can be done by pressing Menu, listening to the available options and then pressing key number 3, or directly pressing key number 3 without pressing Menu first).

The browsing modes for a Daisy 2.02 text file are:

- n°1 key: add bookmark
- n°2 key: standard browsing (by character, word, sentence ; the level of enunciation can also be changed by pressing one finger on the screen + keys 1, 2, 3 or 4)
- n°3 key: + or - 1 %
- n°4 key: + or - 10 %
- n°5 key: change chapters

- # key: where am I

The browsing modes for a Daisy 2.02 audio file are:

- n°1 key: add bookmark
- n°2 key: + or – 1 minute
- n°3 key: + or – 5 minutes
- n°4 key: + or – 30 minutes
- n°5 key: change chapters
- # key: where am I

The browsing modes for an ePub file are:

- n°1 key: add bookmark
- n°2 key: standard browsing (by character, word, sentence ; the level of enunciation can also be changed by pressing one finger on the screen + keys 1, 2, 3 or 4)
- n°3 key: + or - 1 page
- n°4 key: + or - 10 pages
- n°5 key: + or – 100 pages
- n°6 key: change chapters
- # key: where am I

The browsing modes for an mp3 file are:

- N°1 key: add bookmark
- N°2 key: + or – 1 minute
- N°3 key: + or – 5 minutes
- N°4 key: + or – 30 minutes
- N°5 key: previous or next file (when within a folder containing several mp3 files)
- # key: where am I

The browsing modes for a .txt or Nimas file are:

- N°1 key: add bookmark
- N°2 key: standard browsing (by character, word, sentence; the level of enunciation can also be changed by pressing one finger on the screen + keys 1, 2, 3 or 4)
- N°3 key: + or - 1 page
- N°4 key: + or - 10 pages
- N°5 key: + or – 100 pages

- # key: where am I

12.3. Read written press articles

The News application that you can reach from the Home screen by selecting “6- Multimedia” and choosing “3- News” gives you complete and easy access to free content from newspapers directly on your phone.

You can find various newspapers from different countries by pressing the Menu key then Choose Country.

Navigating through the News application is really easy with the Up and down arrow keys, and OK and Back keys.

First, pick the paper you want to read, then the category and finally the article you want to read. Within the article you can then easily use all the actions described in the chapter “4- How to control the voice synthesis”. You can also put your phone in Sleep mode while reading an article.

You can browse the list of available newspapers by countries by pressing the M key then 2-Choose country. You can also add a newspaper to your favourite newspapers folder by pressing the Menu key and selecting “1-Add to favourite newspaper”.

To read foreign newspapers with the correct text-to-speech voice, you need to check that the language has been selected as a reading voice in the language and vocalisation settings.

12.4. Radio application

The radio application gives you the possibility to live stream webradios on your phone. This means an internet connection (Wi-Fi or 3G) is necessary.

To launch the Radio application, go to “6- Multimedia” then “4- Radio”.

The application opens on a list of radio stations. This list can be filtered so you can quickly and easily select your station by entering the first letters of its name using the keypad.

To start listening to a station, preselect it and press OK. It might take a few minutes to load.

The default settings stop the radio when you exit the application. However, you can change this setting by pressing “Menu” then selecting line “3- Sound outside radio player”, which enables to play radio in the background.

Several folders with radio lists are available. Among these, you will find “My favorite stations”, “United Kingdom (Populars)”, “United Kingdom” as well that other country-specific folders. The application always opens on the last file you used. To see the list and change folders press the “Menu” key and select “2- Folders” then choose the folder you want to explore.

To add stations to your favourite radios, go for example to the “United Kingdom” folder, preselect a station; press “Menu” and select “1-Add to favorite stations”.

You can also add the link for a webradio that isn’t in one of the lists by pressing the “Menu” key and selecting “4-Add new station””. Then you have to enter the web address of the radio (usually finishing by .m3u), confirm it, enter a name for the radio and confirm one more time. The added station is immediately added to your Favorites.

Caution: the web address to be entered to add a new webradio is the address of the streaming flow. It usually ends with .m3u.

The fifth option in the application-specific menu is “5-Update stations list”. This should be done regularly so that you can always access up-to-date and accurate stations links.

12.5. Web browser

To start the Web browser application from the Home Screen, go “6- Multimedia” and select the line Web Browser. Think of checking if mobile or WAP versions of the sites you want to visit exist. It will make your browsing easier!

12.5.1. Browser Home Page

On the browser Home Page you can choose between Google search, the different pages currently opened and the list of your favourite pages. You can also enter a website URL and access the browser parameters.

12.5.2. Start a Web research

The easiest way to start a web search is to press the Menu key and select “2-Web search”. You will be sent to an edit text screen from which you can enter your keywords using the keyboard or the voice recognition.

For example, you can ask with the voice recognition “How high is the Eiffel Tower?”

Confirm your entry by pressing OK and the Google search results page will be displayed!

12.5.3. Shortcuts for browsing a web page

To explore a web page, use the Up and Down arrow keys to go from one item to the other, OK to select a link or a form, Back to go back to the previous page.

You can filter the browsed items using the numerical keys. Here are the shortcuts:

- press 1 to browse by item, without filters
- press 2 to browse by links
- press 3 to browse by titles/headings
- press 4 to navigate by forms
- press 9 to restart the continuous reading of the webpage.

For pages containing a main article (e.g. a newspapers or blog article, it is possible to isolate the text of that article by pressing the star key. On that screen you can then choose the level of articulation, by character, word, sentence or paragraph in order to know the meaning of an expression or term for instance.

12.5.4. Manage the tabs

The browser can manage several tabs, allowing you to keep several web pages opened at the same time. Some links even open in a different tab instead of on the page you are on.

To open a new tab from a web page, press Menu then select “3- New Tab”. To change tabs, press Menu then select “4- show tabs”. From the screen listing the opened tabs you can also close them by pressing Menu and selecting “1- close tab”.

12.5.5. Manage your favourite pages

On every web page you can manage your favourite pages by pressing the Menu key then selecting “5-Add to favourites” to add the current page to your favourite pages or “6-Favorites” to show the list of your favourite pages. Do not hesitate to save your favourite websites to easily access them this way.

12.5.6. Download files directly from the web browser

It is possible to download files directly from the web browser. By default, files will be downloaded in the Download folder (accessible in the directory of your phone, via a computer for example), but it is also possible to save files directly in the ClariaBook folder, which can prove very convenient to download ebooks directly from an online library.

Example: Find below how to download an audiobook directly from Audible online library, step by step:

1. *From the Home menu, press 6-Multimedia then 5-Web browser*
2. *Press 4-Enter URL. The text input field already contains the characters http://, you can complete the address by filing in audible.co.uk and press OK.*
3. *After a few seconds, press the key 4 to select the navigation by link and use the down and up arrows to either press “Get my free audiobook” or “Already a member” link if you already possess an amazon account.*
4. *From the new login page which opens, press the key 4 to select the navigation by field and use the down and up arrow to the field email address, press OK to activate the entry mode.*
5. *After the phone tells you “Empty, lower cases”, press the # key (at the bottom right of the elastomer keyboard) to activate the numerical keyboard; you can now type in your email address.*
6. *Press the down arrow to select the first password field and press OK if you already have an Amazon account. (If you do not, press the down arrow to select the second password field, press OK; a new page will appear, press the key 4 to select the navigation by field, use the down and up arrow to access to the fields and press the # key to type in your information: Name, email address and new password; press OK to leave the entry mode)*
7. *After the phone tells you “Empty, lower cases”, press the # key to activate the numerical mode if your password starts with numbers; then type the numbers on your keyboard and if you need to type in letters afterwards, press again the # key to switch to the upper and lower case mode; press OK to leave the entry mode.*
8. *Press again the down arrow to reach the Continue button; press OK to enter.*
9. *A message like “Do you wish to remember this password” might pop up, press OK.*

13. 13- Specific Doro features

13.1. Assistance button

The Assistance button is at the rear of your device, just under the camera.

The assistance button makes it easy to contact the help number you have predefined.

Before the assistance button can be used, it has to be activated, and phone number added to the number list.

To set up the Assistance button from the Home screen, go to 1-Phone and 6-Assistance button configuration.

To select how to activate the assistance button, you can choose between two different options:

- Off to disable the Assistance button,
- On (3) to activate assistance button by pressing the button 3 times within 1 second.

Once done, you can then scroll down to 2-Assistance numbers list to enter the number.

13.2. Audio features

If you use a hearing aid or have hearing difficulties when using the telephone in a noisy environment, you can customise the phones audio settings.

From your Home menu, go to 9-Settings, then 6-Sound and volume and 1-Audio Profiles to set up your audio settings from 1-Normal for normal hearing in normal conditions, 2-High for moderate hearing impairment or use in a very noisy environment to 3-HAC mode, for use with hearing aid.

The Doro phone is hearing aid compatible (HAC). However, please note that hearing aid compatibility does not guarantee that a specific hearing aid would perfectly work with a specific phone. Mobile phones contain indeed radio transmitters that may interfere with hearing aid performances. This phone has been tested for use with hearing aids, especially for some of the wireless technologies that it uses, but there may be some newer wireless technologies that have not been tested yet for use with hearing aids. To ensure that a specific hearing aid is compatible with the Doro phone, please try them together before purchasing the device.

The standard for hearing aid compatibility contains two types of ratings:

- M: To use your hearing aid in this mode, make sure that your hearing aid is set to "M-mode" or acoustic coupling mode, and position the telephone's receiver near the hearing aid's built-in microphone. In order to obtain better results, try using the phone in different positions relative to your hearing aid—for example, placing the receiver slightly above the ear may result in better performance for hearing aids with microphones positioned behind the ear.
- T: To use your hearing aid in this mode, make sure that your hearing aid is set to "T-mode" or coupling mode (please note that some hearing aids do not have this mode available). For the best results, try using the telephone in different positions relative to your hearing aid—for example, placing the receiver slightly below or in front of the ear may result in better performance.

14. 14- Learn how to use the standard Android environment

In this chapter we will explain how to use the standard Android environment to make your experience more powerful. Indeed, Android standard is the native operating system of your phone powered by Google. It gives you the possibility to access over six hundred thousand applications developed for Android and available online on Google's online shop, Google Play Store.

Note that when you restart your phone, you will automatically be brought back to the Voice Mode default interface.

14.1. Use TalkBack to navigate through the standard Android interface

TalkBack is the screen reader designed by Google for Android. In the default settings, when you go from the Voice Mode interface to the Android interface, TalkBack is already activated and reads all of the Android screens. You can change this setting by going to “9-Settings” then “2- Android interactions” and “2-Screenreader” (Careful: this means that when you go to the Android interface, you can find yourself on non-vocalized screens!)

At any time, you can return to the Voice Mode interface by double clicking on the Home button.

Don't hesitate to take off the elastomer keypad overlay to use the whole screen when you are on the Android standard interface with Talkback.

To help you navigate in the Android interface, you will find below a description of a few gestures enabling you to use Talkback in Android:

- **Slide one finger:** explore your screen and hear audio commentaries on what you are touching
- **Press twice anywhere on the screen:** open or activate the latest element you touched
- **Slide two fingers up or down:** scroll up or down lists and pages
- **Slide two fingers left or right:** switch page or screen
- **Slide finger right (or down):** skip to next item
- **Slide finger left (or up):** skip to previous item
- **Slide finger down then up in a single movement:** skip to the next reading level while reading text blocks, then slide finger to the right to keep reading or to the left to go back
- **Slide finger up then down in a single movement:** skip to the previous reading level while reading text blocks, then slide finger to the right to keep reading or to the left to go back
- **Slide finger to the right then to the left in a single movement:** skip to next information
- **Slide finger to the left then to the right in a single movement:** skip to previous information.

While exploring the screen with one finger, you can use another finger to press twice and open an application, a widget, etc.

The Voice Mode interface is way easier to use than Talkback for most usual actions but if you feel capable of learning how to use it or already know how to, you will be able to enjoy a complete access to all Android applications.

Example: You can enjoy the convenience and ease of use of Voice Mode during the day, then take a few minutes to go to the standard Android interface to check your favourite newspaper application, if it can be accessed through Talkback, before going back to the Voice Mode interface.

14.2. Starting Android applications

On the Voice Mode Home screen, select “7-Android applications” to see the list of the Android applications installed on your phone.

Pressing OK will then start the selected application and Talkback will take over the Voice Mode interface. The screens will then no longer be optimized for the elastomer keypad overlay and you will need to use the tactile screen to interact with your apps (using the gestures described above). You should therefore remove the overlay to use the Android standard platform. Pressing the Home button will get you back to the Voice Mode interface.

By starting the Google Play Store application, you will be able to download the Android applications you want among hundreds of thousands of applications available on the store.

All the new applications you install will automatically appear in the Android applications list and you will be able to start them from the Voice Mode interface.

14.3. Change interfaces: learn how to go from Voice Mode to Android

It is very important that you master the change of interface between Voice Mode interface and standard Android.

The default settings enable to switch to the standard Android interface from Voice Mode only by pressing the Sleep-Wake button for 2 seconds and selecting line "5-Exit Voice Mode". You can then very easily go back to the Voice Mode interface by pressing the Home button twice quickly.

For more experienced users who would want to change interfaces on a regular basis, it is possible to make this change easier by having the same switch procedure in the two interfaces and changing interfaces by pressing the Home button twice quickly. To allow this, from the Home screen go to "9-Settings" then "2-Android interactions", then "1-Home button double click".

When activated, the double click on the Home button changes the default settings for the interface on your phone. For example, if you were in the Voice Mode interface, a simple click on the Home button opens the Voice Mode Home Screen whereas a quick double click will start the Android standard interface. From this moment on, if you click on the Home button again, you will come back to the Android standard Home Screen. To go back to Voice Mode, you will need to click twice quickly on the Home button.

14.4. Set up a Google account to synchronize your contacts and calendars

What is interesting with Android is that you can easily synchronize your Gmail account with your phone so you can easily access your contacts, calendars and emails.

For technical reasons we were unfortunately unable to integrate those settings in Voice Mode. Nevertheless, we encourage you to synchronize your information through the standard Android interface either by yourself using TalkBack or with the help of someone around you.

To synchronize or create your Google account, go to the Android interface then select the application button just above the Home button and find the Settings icon. In the Settings go to "Accounts- Add account", select Google and enter your Google email account information or create a new one. Through this action the Contacts and Calendars applications will be synchronized with your Gmail data.

For the Email application, you have to enter your email address and password manually in the interface as explained previously in this guide.

14.5. Download new voice synthesis

If the voice installed on the phone doesn't suit you, you can download new ones. For this, go to the Google Play Store by pressing "7-Android applications" then selecting "Google Play Store".

You then need to download the right application on your phone and install the synthesis of your choice. You will need to indicate your credit card information to buy the new voice.

We would advise you to get some help from someone for the next steps.

For example, to install an Acapela voice, here are the steps to follow:

- 0) With a new device, you will need to create a Google account in order to access the PlayStore and enter a payment card if needed.
- 1) Then, go to the Google Play Store and choose “Acapela TTS Voices”
- 2) Launch the Acapela TTS Voices application and choose your preferred voice (you can hear it before purchasing)
- 3) Purchase your preferred voice and launch the download. Your voice is now installed and accessible by choosing “9- Settings” then “3- Language and vocalisation” (cf chapter 15.3.1. in this guide).

15. 15- Install the software updates

In the next months or years, the software is going to evolve and be improved by the development of new applications and the improvement of existing ones.

You will be able to download these updates to enjoy the improvement of your applications and of the interface.

To install those updates, you should visit from the Home screen the item “8- Updates” on a regular basis. In this section you will find all new updates so you can install them on your phone as soon as they are available. You do not need to connect to your computer.

We strongly advise you to connect your phone with the Wi-Fi while downloading those updates and to have at least 50% of battery charge.

The application updates are displayed over three submenus: major updates (the most important evolutions), then minor updates (no new functionalities but small fixes), and finally the new applications.

To update the system, first go to “4- Update system” to download the new version of the software. This kind of update is less frequent. Those files take a lot of space (Up to 200Mo) and take time to download. Follow the instructions to install the new software. This will restart your phone automatically and can take up to 2 or 3 minutes.

To receive the details of available updates, you will be asked to enter a few personal information in the Updates application.

16. 16- Change your Phone settings according to your needs

To change your phone settings according to your needs go to the settings by selecting “9-Settings” on the Home screen.

In this settings menu, you will also find all the advanced software options that you can modify.

Let’s browse through the available settings.

16.1. Connection settings

16.1.1. Connect to a WiFi network

From the Home Screen, select “9- Settings” then “1- Connections”.

On the first row of this menu you will find “1- Wifi”. Press Ok to access Wifi settings.

You can now:

- Enable or disable Wifi on the first line by pressing OK
- On the second line, you can choose the network to which you wish to connect. The app then presents you with a list of available networks. Select desired network by pressing OK. Then enter WEP key/ password if necessary using the ABC keyboard, and press OK. Your phone then connects to the desired network and indicates it is connected.

If this is the first time you attempt to connect to a Wifi network, we would recommend to ask someone around you to help you connect.

The two most common mistakes while trying to connect to Wifi are: either entering the wrong password which is usually long and alternates numbers, upper and lower case letters, or connect to a public network that can only be used temporarily and requires a complex identification through the web browser.

16.1.2. Connect an external device in Bluetooth (headset, headphones, keyboard, Braille display...)

The phone enables you to associate external device to your phone such as a Bluetooth headset, an external QWERTY keyboard or a Braille display.

To do so, from the Home screen go to “9- Settings” then “1- Connections” and “2- Bluetooth”. You are now in the Bluetooth menu with on the first line the possibility to browse through the list of the devices which have been associated with your phone. By pressing OK on one of those devices, you can rename it, dissociate it or launch the connection. Once your external device is connected, the third line of the screen indicates disconnect (instead of connect).

On the second line of the Bluetooth menu you can launch a search of accessible Bluetooth devices in your surroundings. To ensure your external device is detected, please make sure to switch it on and activate Bluetooth. Select the chosen device by pressing OK. It then indicates the confirmation password which will ensure a secured connection with your external device. By accepting this message on both devices you will connect them.

The compatible Braille displays are in principle similar to those compatible with Android's BrailleBack solution. For instance, the following Braille devices are compatible: APH Refreshabaille ; EuroBraille Esys range ; Freedom Scientific Focus Blue (14 and 40 characters); HandyTech Ranges Basic Braille, Active Braille and Braille Star, Braille Wave, Braillino and Easy Braille; Harpo Braillepen 12 ; HIMS BrailleSense and Braille EDGE ranges ; Humanware Brailliant range (1st generation and BI) ; Optelec Alva (BC640, BC680); Papenmeier Braillex Trio ; Baum VarioConnect ; Seika (40 characters and notepad).

16.1.3. Activate or deactivate the GPS

From the Home screen, select "9- Settings" then "1- Connections" and "3-GPS" to reach GPS settings.

In that menu, you can choose the level of GPS you want to use or disable it.

Select the High Accuracy option to improve significantly the precision of the localisation in the GPS application.

16.1.4. Activate/deactivate mobile data (locally or abroad); set up a PIN code or the APN

From the Home screen, select "9- Settings" then "1- Connections" and "4- Telephony" to access the below settings:

- Synchronisation: activated by default. This parameter enables you to synchronize or not your data with your Google account.
- Mobile data: activated by default. This parameter enables you to activate or deactivate mobile internet connection from your phone. This can be useful to save battery or to avoid a significant phone bill if you do not have any internet allowance.
- Data Roaming: deactivated by default. This parameter enables you to activate or deactivate mobile data while you are using your phone abroad.
- SIM configuration. This parameter enables you to activate or deactivate the PIN code of our SIM card. You can also modify there the code of your SIM card.
- APN configuration. This parameter enables you to select the access point (APN) that is the most appropriate to your mobile network. If you are connected to the wrong APN, it may prevent you from connecting to the Internet.
- In Android 4.4 or above, choose the default Text message App to use.

16.1.5. Activate or deactivate airplane mode

From the Home screen, go to "9- Settings" then "1- Connections" and "5- Enable airplane mode" to switch off instantly all the connections of your phone (Wifi, 3G, GPS, Bluetooth).

This mode can be convenient when you are travelling by plane but also by night to make sure you won't be disturbed while not having to switch off completely your phone.

16.1.6. Sharing connection – if available

From the Home screen, go to "9- Settings" then "1- Connections" and "6-Tethering" to create a wifi or Bluetooth network from your mobile connection.

16.2. Control your interactions with the standard Android interface

In the menu “9- Settings”, press “2- Android interactions” to access the following parameters:

16.2.1. Home button double click

For experienced users who wish to switch regularly between Voice Mode and standard Android interfaces, this parameter simplifies the way you can move from one interface to the other.

When activated, double clicking rapidly on the Home button changes the interface of your phone.

This setting is deactivated by default.

16.2.2. Talkback

This setting activates or deactivates the TalkBack screen reader for Android applications. See the paragraph “Use TalkBack to navigate the standard Android interface” for more information.

It is activated in the default settings but it can be useful to know how to change it if you let someone you know use your phone in standard Android mode.

16.2.3. Android Zoom

This parameter activates or deactivates the possibility to zoom on any screen of the standard Android interface by a triple tap with one finger on the screen.

When this functionality is activated, you can temporarily increase the size of what is under your finger or use the Magnifier mode to zoom in or panoramically on your screen. This option is particularly suitable for partially sighted users.

Note: the “Press three times to increase size” functionality works everywhere except for the keypad and the navigation buttons.

A few movements are necessary to fully control this functionality:

- Temporarily increase size: tap three times, leaving your finger longer on the last tap
- Increase size and do a panoramic zoom: tap three times, leaving your finger longer on the last tap then slide your finger
- Activate or deactivate the Magnifier mode: tap three times on the screen then lift your finger, or enter into an application or exit it to deactivate the Magnifier mode
- While on Magnifier mode, you can perform one of those actions:
 - o Do a panoramic zoom: slide two fingers or more on the screen
 - o Change zoom level: widen or pinch closer two fingers or more.

This parameter is switched off in default settings.

16.3. Choose the main voice and reading voices, control the voice speed, set the voice recognition and keyboard languages

In the “9- Settings” menu press “3-Languages and Vocalisation” to access the following parameters:

16.3.1. Main Voice

In “1- Main voice”, you have the possibility to choose the language of the menus, then the text-to-speech engine of your choice.

Text-to-speech voices you might have downloaded on the Play Store will be set up at this level.

16.3.2. Reading Voices

By going to “2- Reading voices”, you will be able to choose languages and text-to-speech engines that will be used to read texts fields (SMS, emails, books, articles, etc.)

To read a text, you can choose between three voices/reading languages. This is particularly useful if you receive an email in French or want to read an article in Spanish for instance.

By default, texts are read with voice 1. If you wish to read a text with voice 2 or 3, press one finger on the screen and simultaneously press key number 7 for voice 1, number 8 for voice 2 or number 9 for voice 3, or press the screen with three fingers (ring finger, middle finger and index finger).

By default, available languages for reading voices are: German, English, Spanish, French and Italian.

16.3.3. Voice recognition language

In “3- Voice reco”, you can choose the language of the voice recognition with which you wish to dictate a text (SMS, mail, note).

16.3.4. Keyboard language

In “4- Keyboard”, you can choose the type of keyboard displayed in text input screens. Two keyboards are available at this stage: French and English. The main difference is that the English keyboard does not contain accents.

16.3.5. Speech rate

There are two types of speech rate parameters: one for the main voice (interface menus) and one for reading voices (in text reading screens). In “5- Speech rate”, you will be able to change those rates using the Up arrow key to increase speed and Down arrow to reduce it.

16.3.6. Android voice

In “6- Android voice”, you can choose the language and the text-to-speech engine used by Talkback in Android standard screens.

16.4. Set repeat delay and keypad vibrations, set up your Braille display or your external Bluetooth keyboard



16.4.1. Repeat delay

You can change the repeat delay needed to type two letters on the same key to make it more comfortable for you. See “9-Settings” then “4- Keyboard” and “1- Repeat delay”. If you increase this repeat delay between two letters, it will increase the time between your pressing a key to type a letter and the vibration confirming this letter, which means your phone is ready for the next letter. Reducing this time will consequently mean accelerating your typing speed.

16.4.2. Key press feedback

Through this setting you can choose what your phone does when you press a key. 4 options are available:

- No feedback: Pressing the key doesn't set off any vibration or sound. This is not recommended in most cases.
- Vibration: Pressing a key triggers a light vibration to show your action has been taken into account.
- Sound: Pressing a key makes a light sound to show your action has been taken into account.
- Vibration and sound: pressing a key triggers a sound and a vibration to show your action has been taken into account (default setting).

16.4.3. Keyboard vibration

Parameters “4- Vibration duration” and “5- Vibration intensity” allow you to control the vibrations of the keyboard.

16.4.4. Keyboard sensitivity

Setting “8- Sensitivity” enables you to choose the sensitivity of the keyboard. The default sensitivity level is Normal.

16.4.5. Hardware keyboard type

Three types of keyboards are available as external devices and for standard Android interface:

- AZERTY (European) keyboards supporting shortcuts
- QWERTY (English) keyboards supporting shortcuts
- Standard Android keyboard not supporting shortcuts (recommended for standard Android interface when no Bluetooth keyboard is connected).

To simplify access to functionalities, AZERTY and QWERTY modes offer shortcuts:

- Ctrl + H corresponds to pressing the Home button
- Ctrl + J corresponds to pressing the Menu key (the J key is often distinguished by a pin)
- Enter corresponds to the OK key outside of text input fields
- Esc corresponds to pressing the Back key
- Up arrow corresponds to pressing the Up arrow key
- Down arrow corresponds to pressing the Down arrow key
- Right arrow corresponds to pressing the OK key outside of text input fields
- Left arrow corresponds to pressing the Back key outside of text input fields
- Ctrl + Backspace corresponds to pressing the Correction key outside of text edit fields

- If it exists, the Menu key corresponds to pressing the Menu key
- F1 enables you to put your phone in sleep mode (to get out of sleep mode, press any key then Enter)
- Numerical keys enable you to browse through menus like you would do with the keyboard

In text inputs fields:

- Backspace corresponds to pressing the Correction key
- Control+Enter or Control+Right arrow corresponds to pressing the OK key
- Ctrl+Esc or Control+Left arrow corresponds to pressing the Back key

16.4.6. Braille display

As a reminder, the compatible Braille displays are in principle similar to those compatible with Android's BrailleBack solution. For instance, the following Braille devices are compatible: APH Refreshbraille ; EuroBraille Esys range ; Freedom Scientific Focus Blue (14 and 40 characters); HandyTech Ranges Basic Braille, Active Braille and Braille Star, Braille Wave, Braillino and Easy Braille; Harpo Braillepen 12 ; HIMS BrailleSense and Braille EDGE ranges ; Humanware Brailliant range (1st generation and BI) ; Optelec Alva (BC640, BC680); Papenmeier Braillex Trio ; Baum VarioConnect ; Seika (40 characters and notepad).

To access your Braille display settings you can either go to 9- Settings then 4- Keyboard and 7- Braille display. You will find there a list of shortcuts enabling you to use Braille keys combinations to activate specific functions (Home button, OK or Back key, etc) depending on your device.

By pressing the equivalent of a number in Braille, you activate the corresponding key and can therefore browse easily into menus. For instance, by pressing 1+6 buttons in the Braille display, you activate key number 1 on the phone. In a similar way, the Braille shortcut to the Hash key (keys 3+4+5+6+7+8) from a Menu screen will enunciate the notifications, and the Braille shortcut to the star key (3+5) will give you access to the date, time, and number of activated alarms.

In default settings, the display is in Computer braille (8 dots). It is possible to set the display in Grade 1 or Grade 2 Braille (6 dots). However text input fields will only support computer Braille (8 dots).

When we developed this guide, a few applications like Colour or Light sensors did not support Braille properly. This will be fixed in upcoming updates.

To use your braille display in the Android interface, you will need to download the Brailleback application in the Google Play Store and activate it in accessibility settings.

16.5. Change the time before your screen goes into sleep mode and locks itself

In the "9-Settings" menu, select "5-Screen and Security" to access the following parameters:

16.5.1. Time before going into sleep mode

On this screen, you can choose the time before your screen goes into sleep mode. This is indicated by a beep when the time is over.

You can choose between 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes and 10 minutes.

To exit from sleep mode, press the Home button or the Sleep/Wake button.

16.5.2. Locking the screen

On this screen you can choose whether to lock your screen or not when it goes into sleep mode to avoid pushing the buttons on the screen if you activate the screen unknowingly.

Two lock modes are available:

- Slide: this mode implies that you will need to slide one finger on the screen to exit sleep mode
- Passcode: this mode implies that you will need to enter a numerical code (in general 4 digits) to exit sleep mode

“Slide to unlock” is the default setting.

16.6. Control the volume of the voice synthesis, choose your ringtone and control its volume

In the “9-Settings” menu, select “6-Sound and Volume” to access the following parameters:

- Voice and music volume to control the volume of the voice synthesis in the menus and the music.
- Ringtone volume to control the volume of ringtone when you receive a call.
- Notification volume to control the volume of the ringtone when you receive a text message or an email
- Alarm volume to control the alarm volume.
- Ringtone to listen and choose the ringtone you want when you receive a call. Use the Up and Down arrow keys to listen to the different ringtones and press OK to confirm your choice.
- Notification to listen and choose the ringtone you want when you receive a text message or an email. Use the Up and Down arrow keys to listen to the different ringtones and press OK to confirm your choice.

16.6.1. Add a ringtone

You can add your own ringtones and notification sounds on your phone. To do so, you need to first plug your phone in your computer (as explained in the chapter 11.1 of this guide) then to copy and paste your audio file in

- The Ringtones folder to upload a new ringtone
- The Notifications folder to upload a new notification sound

Once you unplug your phone the files you just uploaded will appear at the end of your ringtones’ list.

16.7. Change the date and time on your phone.

Go to the “9- Settings” menu and select “7- Time and Date” to access the following parameters:

16.7.1. Set changing the time, date and time zone in automatic or manual mode.

The default settings for the time and date are on automatic mode, getting the information from your service provider’s network.

16.7.2. Set the date manually

If you have decided to set the date manually, you will get to a 4 line form with on the first line the year field (ex: 2013), on the second line the month field (enter a number between 1 and 12); on the third line the day field (enter a number between 1 and 31) and on the fourth line the Submit button.

16.7.3. Set the time manually

You here will have a 3 line form to fill in with on the first line the hours (number between 0 and 23), on the second line the minutes (number between 0 and 59) and on the third line the Submit button.

16.7.4. Set the Time Zone manually

If you have decided to set the time zone manually you will access a list of the different existing time zones. You can browse this list using the Up and Down arrow keys and then press OK to select the time zone you want.

16.8. About your phone

In this settings submenu, you will be able to access some information about your phone like:

- Your phone model The Android version
- The software version
- The Battery state
- The IMEI number (equivalent to the serial number of your phone)
- The mobile network to which you are connected